 


Primada 寶康達®

3D旋轉空氣炸鍋
3D ROTATABLE
CONVECTION
ROASTER

PCR-1500
使用說明書
INSTRUCTION
MANUAL

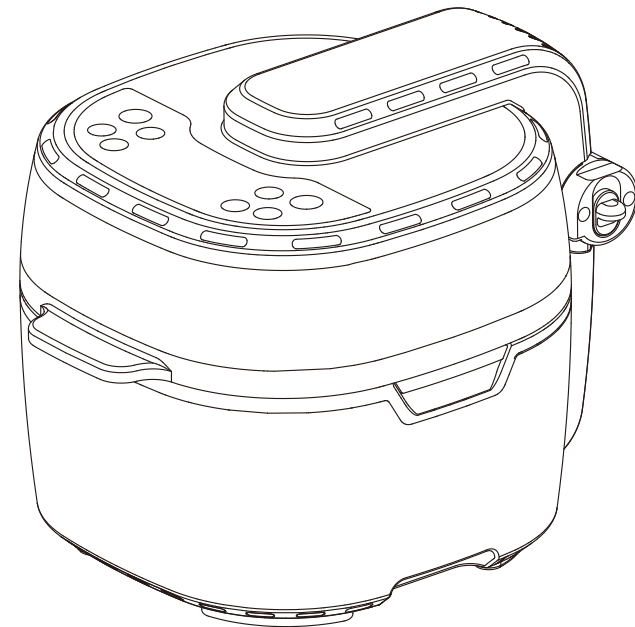

昇鋒國際有限公司

Pro Logic International Limited

電話(Tel):(852)23650655

傳真(Fax):(852)23650235

電郵(Email):info@iplushome.com

網址(Website):www.primada.com.hk



使用前請詳細閱讀使用說明書，並妥善保管以備查閱。
Please read the Instruction manual and warranty information carefully before using and
keep it for future reference.

感謝您選用寶康達3D旋轉空氣炸鍋，為了使您能夠正確使用本產品，敬請使用前詳閱本說明書。

產品功能及特點

1. 3D立體加熱 - 烹調快30%；
2. 透明隔熱罩 - 保溫防燙手；
3. 旋轉無油烤焗 - 健康美味；
4. 多種智能煮食模式 - 健康美味；
5. 多款煮食配件 - 適合不同烹調需要；
6. 方形時尚外觀 - 操作方便易存放；
7. 3重開蓋防跌落 - 設計安全可靠；
8. 240°C 烘烤溫度 - 去油脫脂；
9. 多重安全保護 - 具備揭蓋斷電、無鍋防乾燒、恆溫控制。

安全及注意事項

當使用本產品時，必須遵守以下安全保護措施及注意事項：

1. 請核對並確認銘牌上所標註的電源，確保產品是在符合標籤的狀態下使用；
2. 此產品適合於家庭使用，不適合工業或商業使用；
3. 使用本產品時，必須將產品放置在平整及耐熱的平面上；
4. 請勿讓電源線接觸熱的物體表面；
5. 請勿使用延長電源線來操作本產品；
6. 請勿用拉扯電源線的方法拔出插頭；
7. 請勿將產品放在靠近煤氣爐或煮食爐等高溫環境中使用；
8. 請勿將產品靠近易燃物品使用，如窗簾或窗紗等；
9. 請勿將本產品放在易爆物品附近使用，如汽油等；
10. 請勿使用非本產品製造商提供的零部件及配件；
11. 請勿在無人看管的情況下使用本產品；
12. 8歲及以上年齡的兒童以及物理、感官或精神能力低下或缺乏經驗和知識的人需要在被給予有關安全使用本產品並且理解相關危險的監護或指導下使用。兒童不得玩耍該產品。兒童不得在沒有監護的情況下進行清洗和維護。
此產品及電源線要放置8歲以下兒童不能接觸到的地方。
13. 本產品只適用於家庭或以下環境中：
 - 商店、辦公室或其他工作環境的員工廚房；
 - 農場房屋；
 - 在酒店、旅館或其他住宅租住的客人；
 - 家庭旅館；
14. 請勿將產品主機及帶電源線的插頭等浸入水中清洗；







Cleaning methods

1. Disconnect the product from the mains electricity supply socket and allow the product to cool completely before attempting any cleaning or maintenance.
2. The outer surface of the Main Body Heater/Control assembly can be cleaned by wiping with a damp cloth and drying thoroughly by wiping over with a soft dry cloth. Do not wash or immerse the Main Body, Heater/Control Assembly in water or any other liquid.
3. The inner pot and all accessories may be washed in warm soapy water and dried with a

Recipes for Reference

FOOD	TIME(min)	TEMPERATURE (°C)
Chicken	23-40	220-240
Fish	10-15	180-210
Lamb	15-25	220-240
Cake	20-30	150-165
Lobster	12-15	190-210
Shrimp	10-12	190-210
Sausage	10-13	150-180
Peanut	10-15	135-165
Baked bread	8-10	180-200
Potatoes	20-30	220-240
Rice	20-35	220-240
Crab	10-13	190-210
Skewer	10-12	185-195
Fries	20-22	220-240
Chicken wing	15-18	200-220

      
15. 若電源或插頭出現破損或產品故障時，切勿自行維修。請將產品送到指定的維修中心修理；
16. 請勿自行拆開機體，改裝零件或自行修理；
17. 本產品不能通過外聯計時器或者獨立的遙控系統來工作。
18. 請勿直接或間接加熱易燃易爆物品，以免燃燒著或爆炸，引起危險；
19. 使用時請勿觸摸透明爐罩及爐蓋散熱孔，以免燙傷；
20. 禁止用布或其它物品覆蓋和堵塞爐蓋面板上的散熱孔。
21. 禁止烘烤食物過程和烘烤結束開合爐蓋時，人體面部靠近內鍋，以免燙傷。
22. 禁止烘烤食物過程和烘烤結束時，內鍋未冷卻，直接用手提取內鍋提手，以免燙傷。
23. 禁止烘烤食物過程和烘烤結束時，烤具和食物未冷卻，直接用手提取烤具和食物，以免燙傷。
24. 用戶使用前，必須將內鍋內的烤具和包裝物取出後，才能使用。
25. 使用者搬移產品時，必須提爐體底部提手。
26. 請勿裝食物頂至爐蓋防護罩，適宜留3cm以上距離，以免影響熱風循環及烹飪效果；
27. 烹飪結束後，取轉籠或高、低物架食物時，請用旋轉裝拆夾或取物夾取出；也可待食物降溫後再提取，以免燙傷。
28. 使用過程中發現產品不能啟動或透明爐罩變形及其他異常現象，請立即停止使用，待送公司售後維修服務中心維修合格後，才可繼續使用。

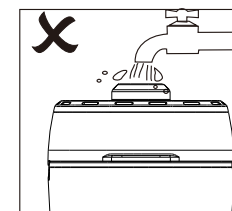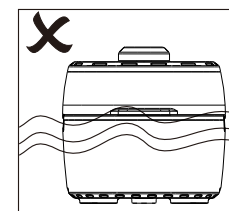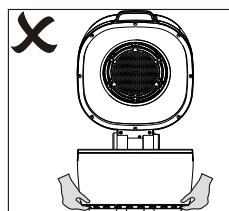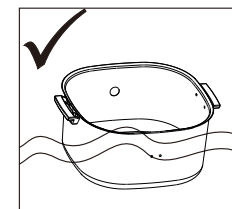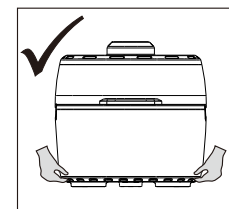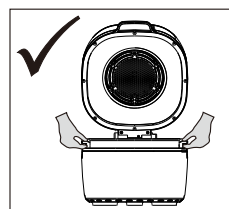

使用前須知

1. 開爐蓋時，必須將爐蓋翻到垂直位置，到位後爐蓋自動鎖住。開爐蓋過程會聽到三下“啞嗶”聲，屬於正常開蓋狀態。
2. 合爐蓋時，必須同步先用一隻手握住爐蓋提手，另一隻手向上撥起右側合蓋開關，用手翻下爐蓋至爐體上。
3. 使用前，必須將內鍋放置到爐體內和放置到位後，才能啟動工作，否則產品不能通電啟動工作。
4. 使用前，必須將爐蓋合到位後，才能啟動工作，否則產品不能通電啟動工作。
5. 啟動工作過程中，如果中途需開爐蓋加調味料或觀察食物，產品自動暫停加熱，當再合上爐蓋時，自動按原設置程式繼續啟動工作。
6. 使用前請取出內鍋清洗乾淨和清洗乾淨所需用的烤具。
7. 操作面板“開關”指示燈發亮，指示供電插座電源已通電，“開關”指示燈熄滅，指示供電插座電源未通電。當需要開始工作時，請先按一下“開關”鍵，“顯示幕”發亮，進入待機狀態；如果不需要開始工作，則再按一下“開關”鍵，“顯示幕”熄滅，退出待機狀態。
8. 由於烘烤溫度由微電腦晶片控制，當溫度達到設定值時，光波加熱管停止加熱，加熱管不亮，當溫度降至設定值時，光波加熱管通電加熱，加熱管發亮。在烹飪過程中加熱管時亮時滅屬正常現象。

 Circuit Diagram

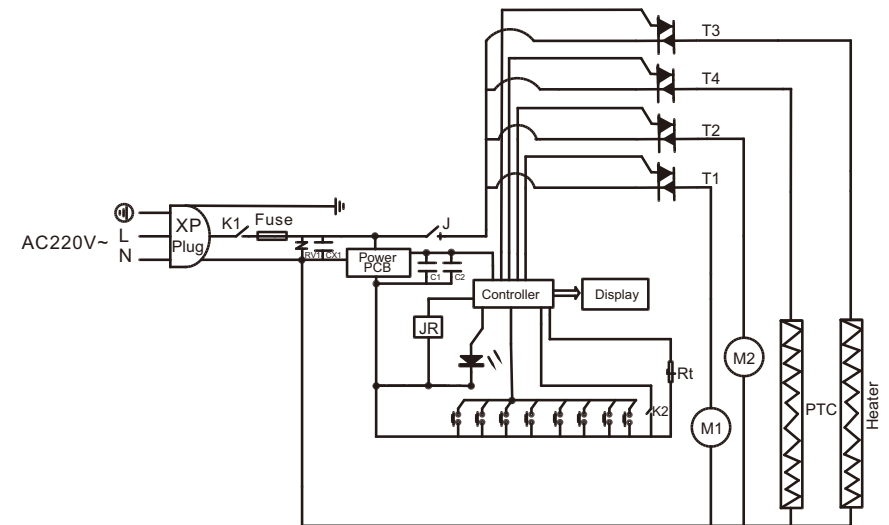

Technical parameters

Voltage	220V
Frequency	50Hz
Power	1360W
Temperature adjustment range	80°C-240°C
Time setting range	0-99(MIN)
Products size(mm)	436(W) X 335(D) X 321(H)
Giftbox size(mm)	450(W) X 450(D) X 378(H)
Container capacity	12L
Net weight	6.5KG

Operation Instruction

1. Place the inner pot in position on the base of the product as previously described in this booklet.
2. Open the Lid of the product and choose the required accessory if required. Always make sure to leave sufficient space between the food and the cover.
3. Close the Lid
4. Connect the product to the electricity mains supply socket.

5. Standby Mode

The buzzer buzzes once and the indication light is on (it will be on until it is unplug). The display screen is off until you press "Power" button, then the product is in Standby Mode. All menus on the screen will flash. You can select the function for cooking.

6. Function selection

In state of standby mode, pressing the "Menu" button can allow you to select the following functions in circulation: "DIY"- "Chicken"- "Beef"- "Lamb"- "Fish"- "Nuts"- "Fries"- "Cake". The indicator of temperature/time will be shown the default data for each function.

7. Temperature setting

In state of function selection, Press temperature setting button can adjust temperature, Temperature indicator will flash once you press this button. Press "+" "-" to increase or decrease the temperatures, the adjusted temperature range is 80°C~240°C. Press "+" "-" , the temperature will increase or decrease 5°C; long press on "+" "-" allows the temperature to increase or decrease 10°C. It will stop until it reaches the maximum 240°C or minimum 80°C.

8. Time setting

In state of function selection, Press time setting button can adjust time, Time indicator will flash once you press this button. Press "+" "-" to increase or decrease the time, the adjusted time range is 0-99 minutes. Press "+" "-" , the time will increase or decrease 1 minute; long press on "+" "-" allows the time to increase or decrease 5 minutes. It will stop until it reaches the maximum 99 minutes or minimum 1 minute.

9. Rotation setting

Press Rotation setting button can choose the rotation modes anytime. The rotation indication light will be on when it is rotating.

 
 
10. DIY

Select the DIY function, the display screen shows "01080", the default temperature is 80°C and time is 1 minute. You can also set the temperature/cooking time/rotation according to above instruction.


11. Start/Cancel

Press Start/Cancel button, the product starts to work after selecting the function; if you want cancel the operating or the state is not in standby mode, pressing this button can directly cancel the current state and return to the standby mode.

產品部件說明

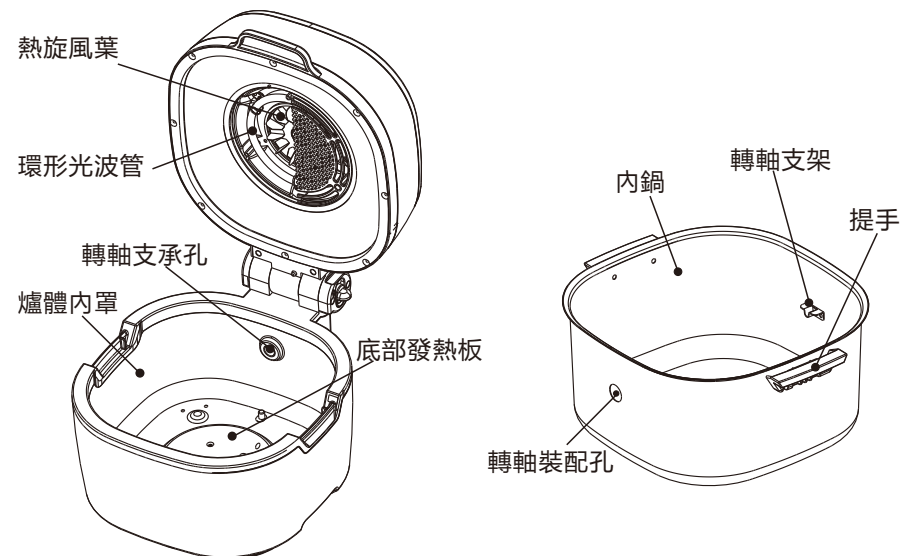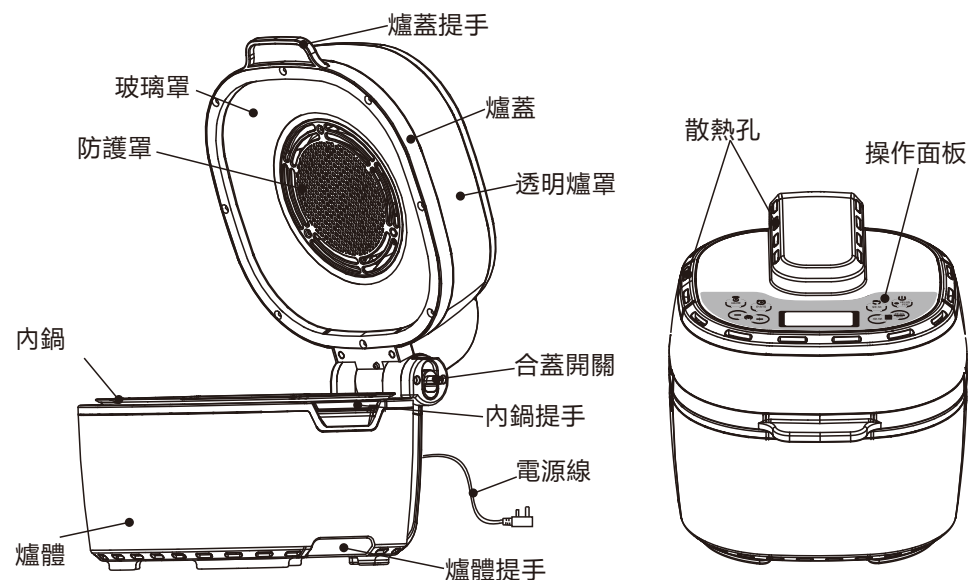


操作面板

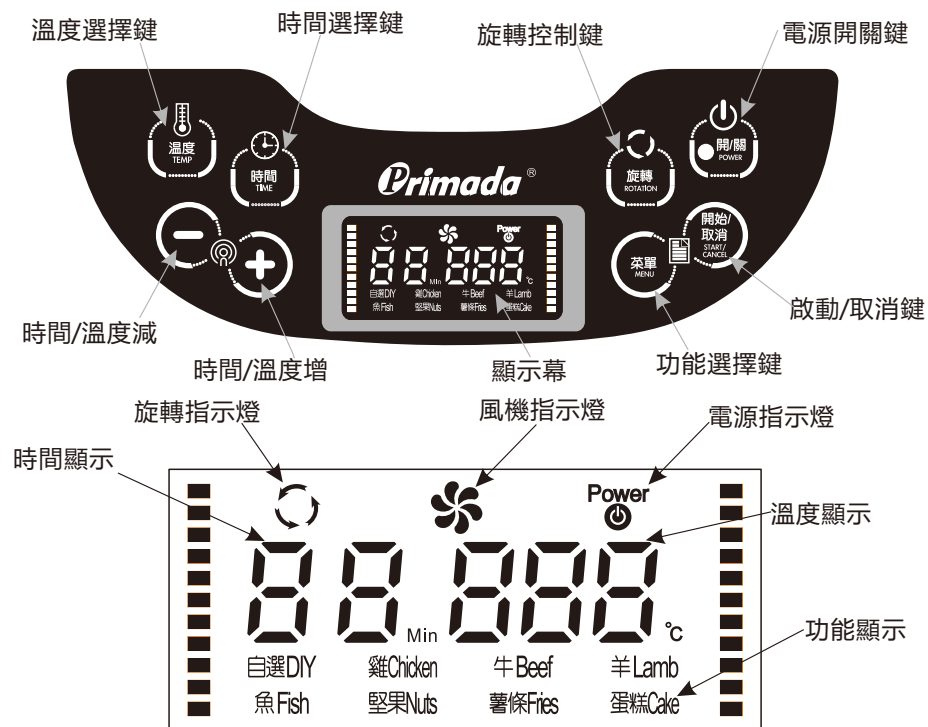 

配件

 
隨機配件

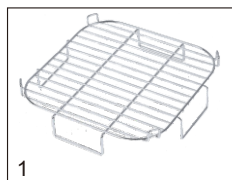

1 高低兩用烤架




 2 煎盤

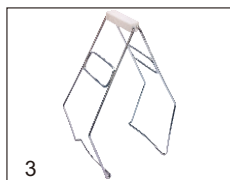


3 取物夾

 
可選配件 (需另外購買)

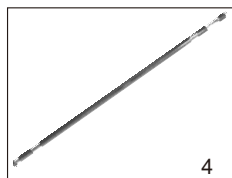

4 旋轉軸(與配件圖
4, 5並用)

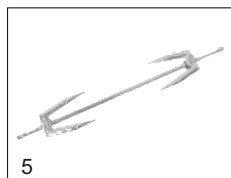 


5 烤雞叉

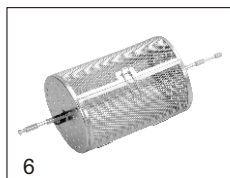 

6 烤籠



How to take out accessories(Forks, Cage, Fried pan)

 When using the accessories (Forks, Cage, Fried pan) finished cooking, please use the "Clip" (3) to move out the food. Following the Figure 1-3 to put the "Clip" to nip the accessory or food, and pick up from inner pot.


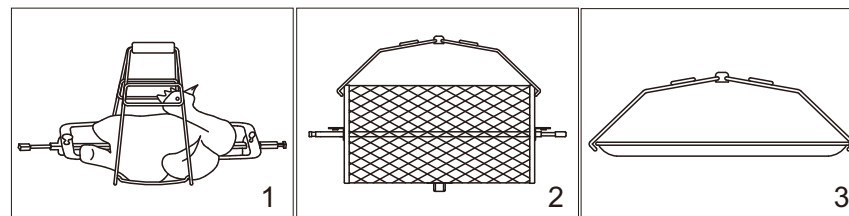


Lid Opening & Closing

  How to open: Hold the handle, the lid turn to vertical position, then it locked. In this period, you can heard 3 times "click", it is normal.

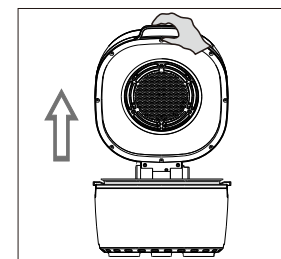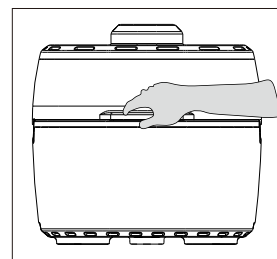

  
How to close: One hand hold the front handle, simultaneously another hand pull the lid lock switch, close it carefully and slowly. In this period, do not release the

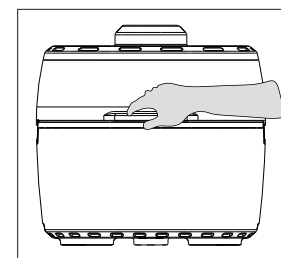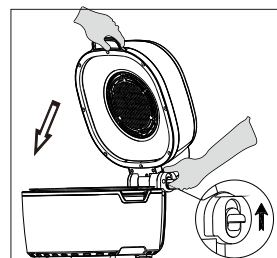

Assembling the Accessories


Assembling the Chicken Forks

 1. Locate one of the Chicken Forks (5) onto the Shaft (4) and screw down the fork holding screw.
 2. Push the spindle through the chicken or meat you wish to cook until the fork engages with the food.
 3. Place the Chicken Fork (5) onto the other end of the Shaft (4) and push it along the rod until it engages with the food and screw down the fixing screw on the fork to fix in position.
 4. Place the assembled Chicken Fork in position on the main body of the cooker making sure that the longer squared section at the end of the rod engages with the drive hole on the main body of the Cooker. Place the shorter squared section on the shaft bracket.
- Caution: Always check that there is sufficient space top and bottom for the food to rotate freely without causing an obstruction.

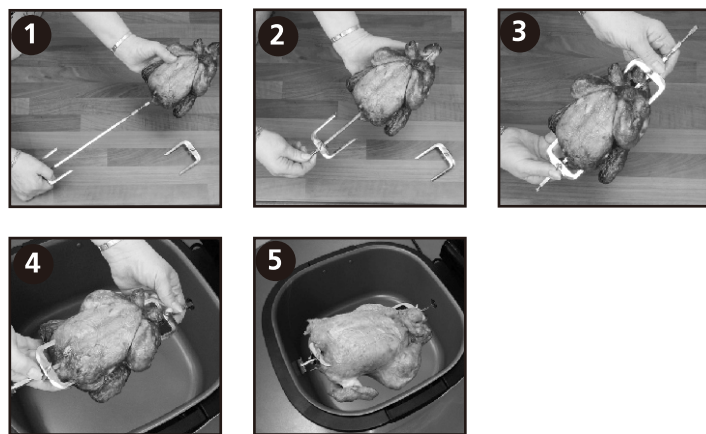


Assembling the Cage

 1. Place the Cage (6) on the Shaft (4) and fix in position with the two fixing screws.
2. Put the food into the cage and close it.
3. Do not overfill the Cage allow for space for a sufficient degree of movement of the chips when the drum is rotating to give even cooking.
4. Place the assembled Cage in position on the main body of the cooker making sure that the longer squared section at the end of the rod engages with the drive hole on the main body of the Cooker. Place the shorter squared section on the shaft bracket.

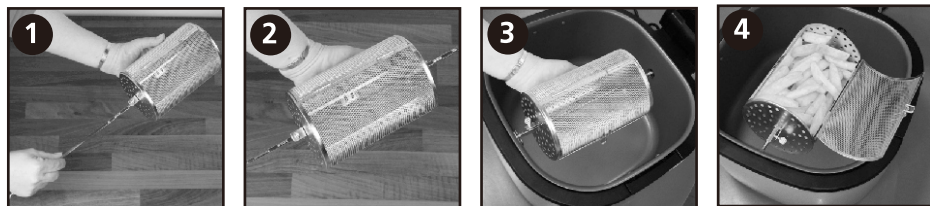

內鍋放置方法

 當產品處於(見圖1)狀態時, 用手握住“爐蓋提手”朝上翻蓋, 當產品處於(見圖2)狀態時, 用雙手握住內膽提手(見圖3), 按(圖4) [注:有支架處朝人體前方]水準放置在產品上(見圖5), 當聽到“嗒”的一聲, 代表已放置好。

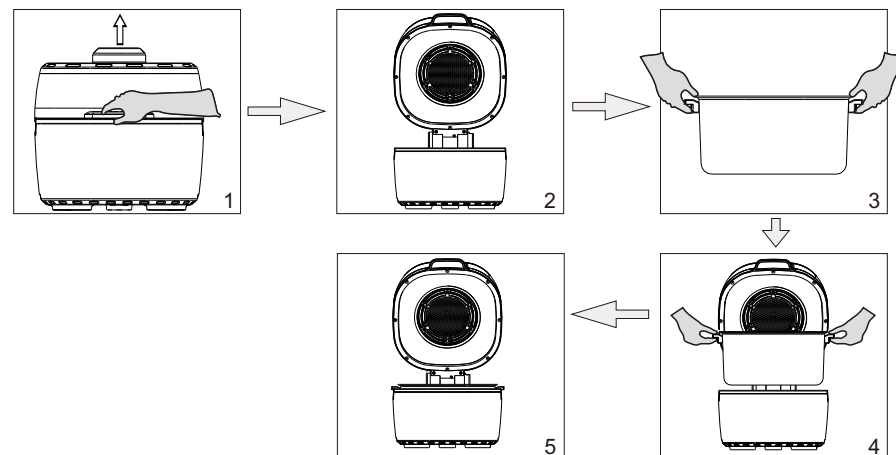


配件安裝方法

烤雞叉使用方法


1. 將一個烤雞叉(配件5)套進旋轉軸(配件4)的一端並用螺絲固定在相應的凹位上;
2. 將旋轉軸穿過雞隻或食物, 直至雞/食物被固定;
3. 將另一個烤雞叉(配件5)套進旋轉軸(配件4)直至能將雞/食物固定, 並用螺絲固定好烤雞叉;
4. 將旋轉軸較長圓柱的一端放入轉軸支承孔, 另一端放在內鍋上的轉軸支架上即可。

 注意: 請留意需預留足夠的空間讓食物旋轉。

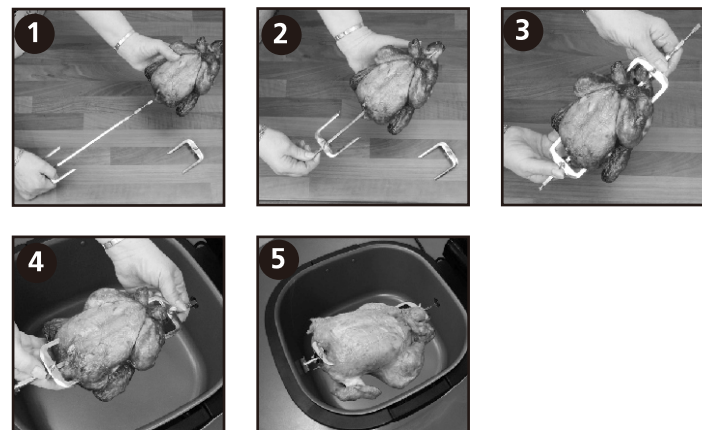


烤籠使用方法

 1. 將旋轉軸插入烤籠(配件6)並在相應的兩端凹位上用螺絲固定好；
2. 將食物放進烤籠(配件6)內並合上滾動門；
3. 注意食物不要放太多，以便預留足夠空間讓食物翻滾；
4. 將旋轉軸較長圓柱的一端放入轉軸支承孔，另一端放在內鍋上的轉軸支架上即可。

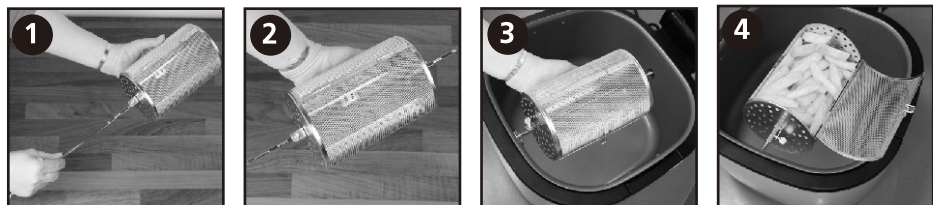


配件(烤雞叉、烤籠、烤盤)提取方法

 使用烤雞叉、烤籠、烤盤烹調完成後，為避免燙手，請使用"取物夾"(配件3)提取食物，按(圖1-3)所示對應夾住配件或食物，從內鍋中提出。

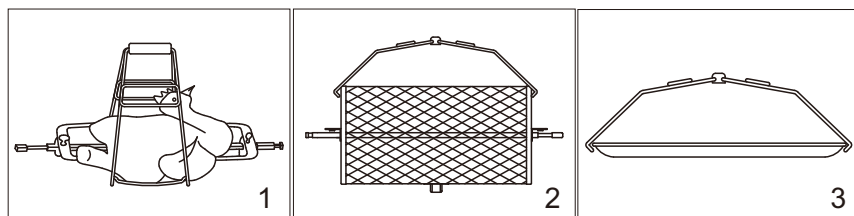

Accessories

 
Standard accessories

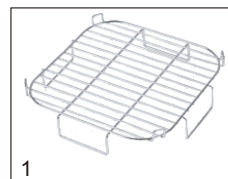

1 Rack




 2 Fried pan

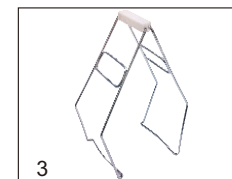


3 clip

 
Optional accessories

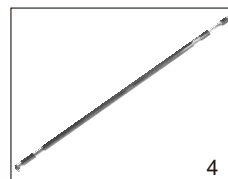

4 Shaft(Use with 4,5)

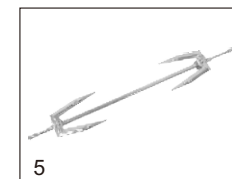 


5 Chicken Fork

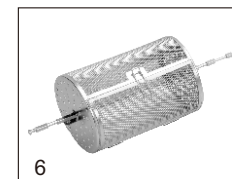 


6 Rotating Roast cage


How to place the inner pot

  Place the product on a firm level heat-resistant surface and open the lid (Figure 1). When the product is in the opening status (Figure 2), hold the handles (Figure 3) and locate the inner pot in position (Figure 5) making sure that the bracket on the inner pot is in front (Figure 4). You will hear a sound when the inner pot locates properly.

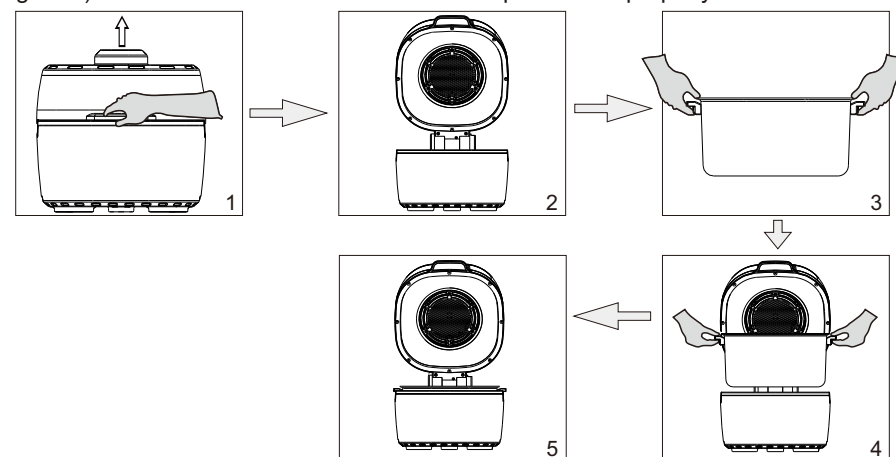


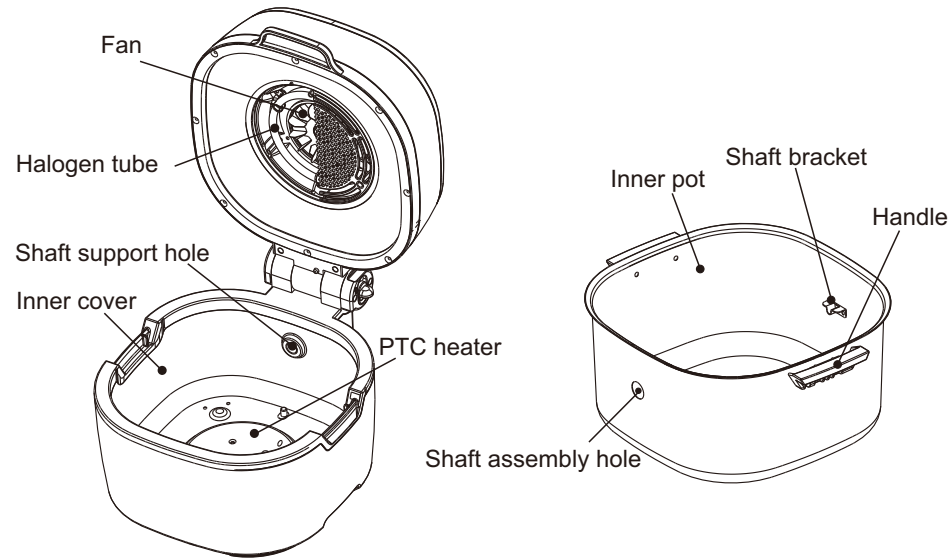


Control Panel

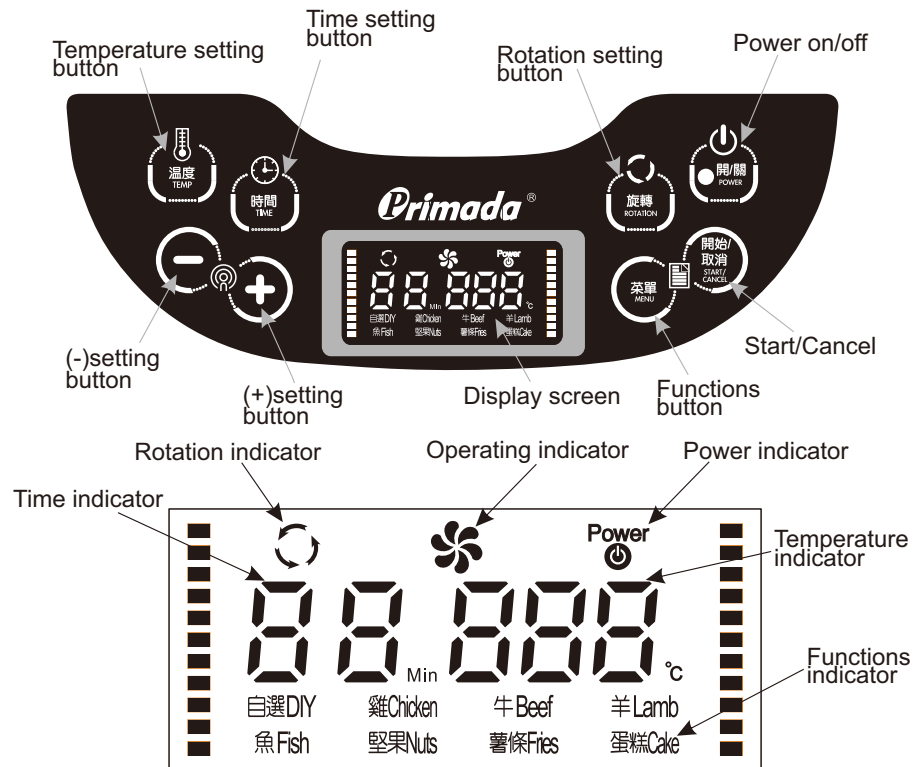 



開爐蓋方法

  開蓋：用手握住爐蓋提手，朝箭頭方向提起至垂直位置即可，到位後爐蓋自動鎖住。開爐蓋過程會聽到三下“啞嗒”聲，屬於正常開蓋狀態。

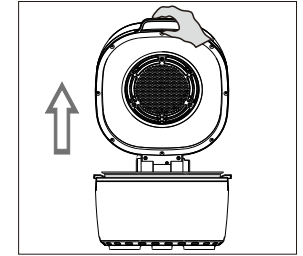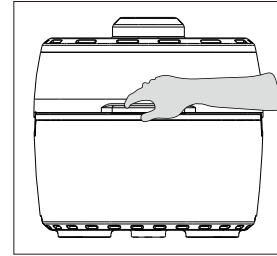

合爐蓋方法

  
合蓋：先用一隻手握住爐蓋提手，另一隻手向上撥起右側合蓋開關，用手翻下爐蓋至爐體上。在合蓋過程中，“合蓋開關”不能脫手，否則爐蓋會自動鎖住。

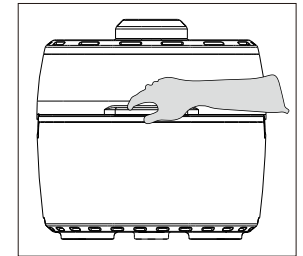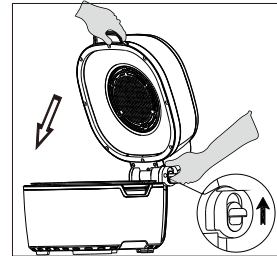

操作方法

1. 把內膽按前頁示意圖所示方向放置在機器裡，或檢查鍋體有無按示意圖放置。
2. 翻開爐頭，根據需要選用配件放置食物到鍋體內。注意：食物與蓋子之間要保留一定的空間。
3. 蓋上爐頭。
4. 連接電源。
5. 待機
接通電源後蜂鳴器響一聲，電源指示燈點亮（拔掉電源的時候才熄滅，否則一直保持長亮狀態。），但此時顯示幕不顯示，需按下“電源開關”鍵，設備則進入初始待機狀態，所有功能表圖示都長亮顯示，此時可操作各類按鍵。
6. 功能選擇
在待機狀態下，按“功能表”鍵可以迴圈選擇功能表：“自選” - “雞” - “牛” - “羊” - “魚” - “堅果” - “薯條” - “蛋糕”，溫度/時間指示燈同時顯示該功能表的預設工作溫度與時間。
7. 溫度控制
在選擇功能狀態下可以使用“溫度選擇鍵”選擇工作溫度，當按下“溫度選擇鍵”時溫度指示燈閃爍，按“+”“-”鍵來提升或降低工作溫度，溫度變動範圍為80 - 240度，每按一次“+”或“-”鍵溫度增加或減少5度，按住不放則以10度為變化單位快速變化到最大值240或最小值80才停止。

 19. Do not touch transparent cover and lid louver, to prevent being scalded.
20. Do not use cloth or other items to cover the vents around the panel.
21. Do not put your face close to inner pot when open the lid during cooking or after cooking, to prevent being scalded.
22. Do not hold the handle directly until the inner pot cooling down, to prevent being scalded.
23. Do not take the accessories or food by hand directly until the inner pot cooling down, to prevent being scalded.
24. Before using, must take out the accessories and packings.
25. Please use the bottom handle when moving the product.
26. Do not place food up to the lid, leave at least 2cm of space, that may result heating cycle system and cooking problem, 2cm distance is suitable.
27. After finish cooking, please use clamp to serve food when using rotating cage or inner rack or high rack. Or serve food wait for until food in a lower temperature to prevent being scalded.
28. please stop using when product cannot start or transparent cover deforms or the appliance does not perform normally, also please contact after service center.

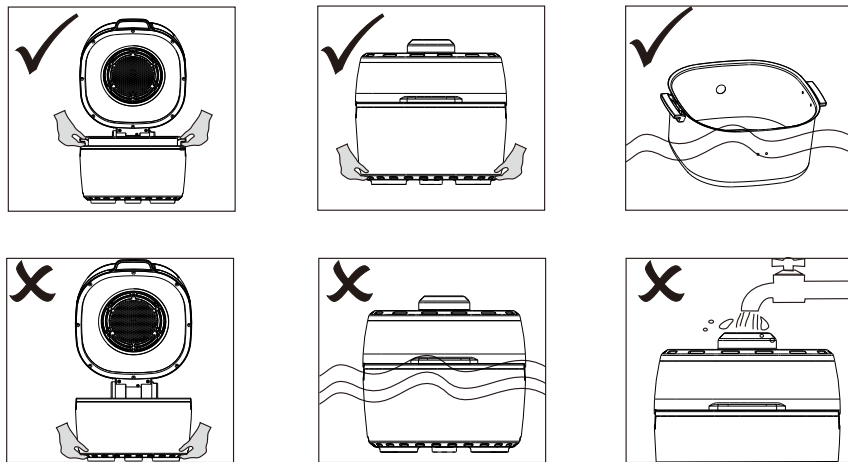

技術參數

電壓	220V
頻率	50Hz
功率	1360W
溫度設置範圍	80°C-240°C
時間設置範圍	0-99(MIN)
產品尺寸(mm)	436(W) X 335(D) X 321(H)
包裝尺寸(mm)	450(W) X 450(D) X 378(H)
容量	12L
淨重	6.5KG

清潔方法

1. 清潔產品前先拔下電源，待機件完全冷卻後方可進行。
2. 清潔爐頭表面及爐罩時，請使用溫軟布或濕海綿抹拭，不可用水直接沖洗。
3. 清潔內鍋、配件、爐蓋時，可用含溫和洗潔精的水進行清潔，但不可在高溫時進行。

參考食譜

食物	設置時間(min)	設置溫度(°C)
雞	23-40	220-240
魚	10-15	180-210
羊	15-25	220-240
蛋糕	20-30	150-165
龍蝦	12-15	190-210
小蝦	10-12	190-210
香腸	10-13	150-180
花生	10-15	135-165
烤面包	8-10	180-200
馬鈴薯	20-30	220-240
大米	20-35	220-240
螃蟹	10-13	190-210
串燒	10-12	185-195
薯條	20-22	220-240
雞亦	15-18	200-220

Thanks for choosing Primada 3D Rotatable Convection Roaster. Please read this user manual carefully before using.

Product feature and characteristic

1. 3D convection heating - Cook 30% faster.
2. Transparent cover - keep warm but not scald.
3. Rotating baking system without oil - healthy & delicious.
4. Difference kinds of cooking mode - healthy & delicious.
5. Variety of equipment - to cope with different cooking methods.
6. Stylish square shape appearance - easy to store.
7. Safety lock design - cover with safety lock to avoid accident.
8. 240°C high temperature - easy to skim oil.
9. Multiple security design - Power turn off once open during operation, stop operation without inner pot, thermostatic control.

Important safeguards

Please always follow the basic precautions when using the appliance:

1. Before switching on the product, ensure that the voltage indicated on the rating label is the same as that in your home.
2. This product is intended for household use only, it is not intended for commercial or industrial use.
3. Ensure the product is placed on a flat stable, dry heat-resistant surface when in operation.
4. Do not allow the power cord to come into contact with warm parts of the appliance or any other hot surface.
5. Do not extend the power cord to operate appliance.
6. Do not pull the power cord to unplug the power.
7. Do not place the product on or near a heated cooker or a hot gas or electric burner.
8. Do not operate the product under a wall cupboard, shelves or other overhanging objects or near flammable materials such as blinds, curtains or wall hangings.
9. Do not operate the product in the presence of explosive and/or flammable fumes such as petrol or kerosine.
10. Do not use any other accessories or attachments not recommended by the manufacturer with the product.
11. Do not operate the appliance without supervision.

12. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children under 8 years old.

13. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
14. To protect against electric shock, DO NOT immerse the cable, plug or the product main body heater/control assembly in water or any other liquid.
15. Do not operate the product if the power cord, plug or product is damaged or if the product has been dropped or has malfunctioned. If the main cord is damaged it must only be replaced by the manufacturer or their service representative as special tools are required.
16. To avoid risk of electric shock do not dismantle the product control/assembly. Any repairs must be carried out by the manufacturer or their service representative.
17. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
18. Do not heat explosive materials directly or indirectly by product, to avoid burning or explosion.