

# 原味鍋 | PMC2800

ELECTRIC MULTI COOKER

ZH-HK 說明書

EN Instruction Manual



**Primada** 實康達®

ZH-HK

說明書 .....

2

EN

Instruction Manual .....

10

---

感謝您選購寶康達產品 —— 原味鍋！希望您使用愉快，我們相信這款全新原味鍋將幫助您烹調更快速方便，讓您重新感受到烹飪的樂趣及擁有不一樣的美食滋味。

使用中如果遇到任何問題，請聯絡我們的售後服務中心，將有專業人員為您解答問題。

如欲更多產品資訊：[www.primada.com.hk](http://www.primada.com.hk)

本資料產品以實物為準，原廠保留產品更新的權利，如有變動，恕不另行通知。

**感謝您的選擇！**

# 目錄

---

1. 安全注意事項 .....	2
2. 產品組成 .....	3
2.1 包裝隨附物件 .....	3
2.2 技術參數 .....	3
2.3 組件名稱 .....	4
3. 產品使用 .....	5
3.1 使用前須知 .....	5
3.2 操作說明 .....	5
3.3 指示燈指引 .....	5
3.4 提醒 .....	5
3.5 烹調參考 .....	5
3.6 功能詳解 .....	6
4. 清洗與保養 .....	8
5. 關於回收 .....	9

# 1. 安全注意事項

使用電器產品前請仔細閱讀此說明書。  
請保管好此說明書。

使用電器產品時，請保持一貫的警惕性，遵循以下事項：

1. 若忽視安全指示，本公司恕不負責損壞責任。
2. 若電源線受損，須由製造商、其服務代理商或相似的合格人員更換受損的電源線，避免危險。
3. 切勿以拉扯電源線的方式搬運電器，並確定電源線沒有纏繞在一起。
4. 電器產品須放置於穩固、平坦的表面上。
5. 使用者不可在電器產品已接上電源時離去，讓電器產品無人看管。
6. 本電器產品僅限用於原本的製造用途。
7. 本電器產品只可用於家中與相似的應用中使用，例如：
  - 商店、辦公室及其他工作環境中的員工廚房區。
  - 由飯店、汽車旅館及其他住宅式環境中的客戶使用。
  - 民宿。
  - 農家。
8. 請勿讓 0 歲至 8 歲的兒童使用此電器產品。8 歲以上的兒童可在持續受到監督的情況下使用此電器產品。生理、感官或心智不健全之人，或缺乏經驗知識之人，須有人在旁監督，或已指示如何安全使用本電器產品，且瞭解涉及的危險後，才可使用電器產品。兒童不可玩要電器產品。請讓 8 歲以下兒童遠離本電器產品及其電源線。8 歲以上的兒童且有成人在旁監督，才可進行清潔與保養工作。
9. 請勿將電源線、插頭或電器產品浸泡在水中或任何液體中。
10. 本電器產品不適合透過外部定時器或個別遙控系統的方式操作。
11. 必須使用本機隨附的耐溫電源插頭連接本電器產品。
12. 清潔本電器產品之前，務必先拔下接頭；請先確定連接口徹底乾燥，再繼續使用本電器產品。
13. 本電器產品表面於使用後可能仍有殘留餘熱，請勿觸摸以免燙傷。
14. 不使用本電器產品時、組裝或拆卸前以及清潔與保養前請拔除電源插頭。
15. 電器產品應透過固定握把 (若有) 維持平穩姿勢，以避免高溫湯汁濺出。
16. 兒童不可玩要電器產品。
17. 本電器產品使用時，表面會產生高溫，請勿觸摸以免燙傷。
18. 使用完畢，清潔本產品前，請先關掉電源，拔除電源頭並等候電器產品冷卻。有關本產品詳細的清潔及保養事項，請參閱說明書 P.8 「4. 清潔與保養」部份。

警告：使用不當會引發潛在危險。

警告：請勿讓水溢出到連接器上。


## 2. 產品組成

### 2.1 包裝隨附物件


隨機配件



 PMC2800

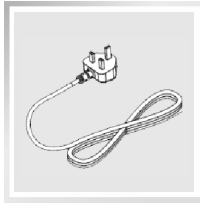

電源線

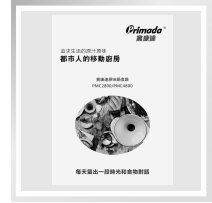 

食譜



說明書



產品保用證

### 2.2 技術參數

 
產品名稱	多功能原味鍋
型號	PMC2800R/PMC2800B
電源	220-240V~50/60Hz
功率	1000W-1200W
容量	2L
尺寸	286x227x193mm

\* 因產品持續改善，原廠保留產品更新的權利，如有變動，恕不另行通知。


## 2. 產品組成

### 2.3 組件名稱

#### 主機

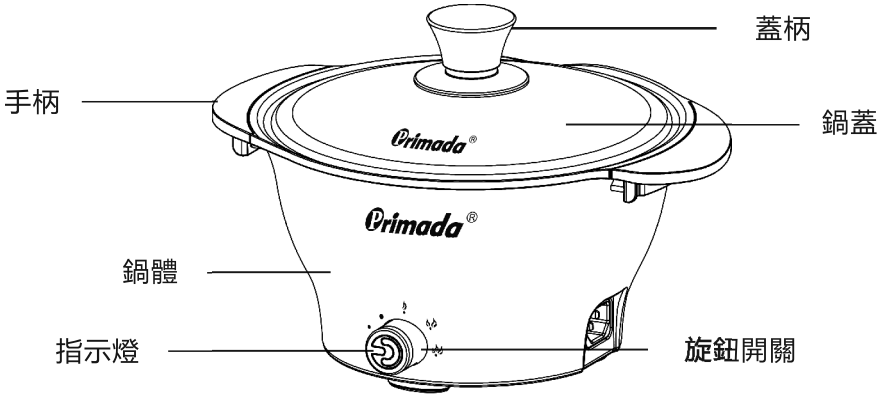

#### 旋鈕開關

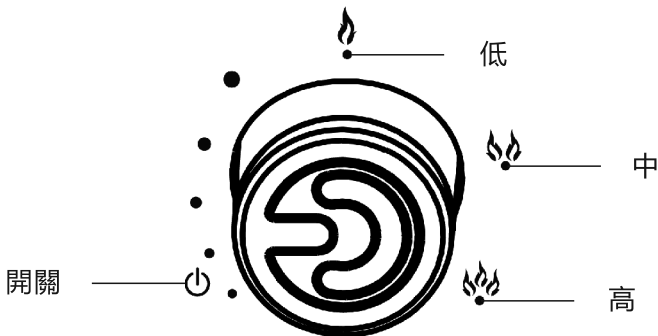 


## 3. 產品使用

### 3.1 使用前須知

- 請將電器產品及配件自紙箱中取出。撕下電器產品的貼紙、保護膜或塑膠膜。

### 3.2 操作說明

- 首次使用電器產品前，請先用布擦拭所有可拆卸的零件。切勿使用磨蝕性產品。
- 請將電器產品放置於平坦、穩固的表面上，並確保電器產品周圍至少保留 10 公分的間距。本電器產品不適合安裝於櫥櫃或戶外之用。
- 將電源線插入插座。(備註：連接電器產品前，請確定電器產品上指示的電壓與當地電壓相符。電壓 220V-240V 50/60Hz)
- 小心：表面高溫
- 在插上電源線前，確認旋鈕調至“”位置。

### 3.3 指示燈指引

- 指示燈會時亮時熄滅，顯示溫度控制器在發揮作用調節溫度，屬正常狀態。

### 3.4 提醒

- 建議烹調過程中把蓋子蓋上，以達到更佳煮食效果。
- 建議使用木製或矽膠鍋鏟去翻動食材。
- 嚴禁將電器產品浸泡在水中或其他液體中進行清潔。

### 3.5 烹調參考（詳情請參考食譜）

原味鍋可配搭下列設定使用：

功能	設定
保温	低
煮沸	中
蒸煮/慢燉	中
燒烤/煎炒	高
烘烤	高
火鍋	高

## 3. 產品使用

---

### 3.6 功能詳解

#### 保溫

- 此設置將為任何預先煮熟的食物保溫。在使用保溫功能前，請確保所有食物都已充分煮熟。
- 當你完成烹調，請確保把電器產品關掉並拔出插頭。

#### 煮沸

- 此設置適合煮沸任何食物。
- 把要煮的材料放進鍋裏，加入適量的水，然後把蓋子蓋上。
- 將旋鈕調到中火位置，讓所有的材料完全煮熟。
- 當你完成烹調，請確保把電器產品關掉並拔出插頭。

#### 慢燉

- 此設置下適合慢燉任何食物。
- 把要煮的材料放進鍋裏，加入適量的水，然後把蓋子蓋上。
- 將旋鈕調到高火，直到水達到沸點為止。
- 達到沸點時，轉動旋鈕到中火使食物煮至全熟。
- 當你完成烹調，請確保把電器產品關掉並拔出插頭。

#### 蒸煮

- 此設置適合蒸煮食物。
- 蒸制食品需要放適量水在鍋裏。
- 把食物放在蒸架上。
- 蓋上蓋子，計算蒸的時間。
- 確保原味鍋在蒸煮的時候有人看管以防止燒乾。
- 當你完成烹調，請確保把電器產品關掉並拔出插頭。



## 3. 產品使用

---

### 燒烤

- 此設置適合燒烤任何食物。
- 把食物放進鍋裏後沿著鍋邊加入所需的食用油或牛油。
- 當你完成烹調，請確保把電器產品關掉並拔出插頭。

### 煎炒

- 此設置適合煎炒任何食物。
- 把食物放進鍋裏後沿著鍋邊加入所需的食用油或牛油。
- 當你完成烹調，請確保把電器產品關掉並拔出插頭。

### 烘烤

- 此設置適合烘烤任何食物。
- 把食物放進鍋裏後沿著鍋邊加入所需的食用油或牛油。
- 當你完成烹調，請確保把電器產品關掉並拔出插頭。

### 火鍋

- 此設置下適合火鍋。
- 在鍋中加入適量的水，將旋鈕調到高火，直到水煮沸。
- 水完全沸騰後，把食物放入鍋中，蓋上蓋子。
- 當水再次達到沸點時，根據個人口味加入一些調味料。
- 當你完成烹調，請確保把電器產品關掉並拔出插頭。

## 4. 清洗與保養

---

- 在使用本電器產品前，請先清潔鍋身及相關金屬配件。
- 使用完畢，清潔本電器產品前，請先關閉電源，拔除電源插頭並等候電器產品冷卻。
- 用抹布將煲體外面擦乾淨。嚴禁將煲體浸入水中清洗或用水噴淋。
- 為保持鍋具不黏效果，建議以海綿配合液體清潔劑輕輕擦洗。嚴禁用固體清潔劑或鋼絲球清洗鍋具表面。
- 使用一段時間後，鍋具表面可能會輕微變色，屬正常現象，不影響使用安全性。
- 如遇頑固污漬，加入熱水浸泡數分鐘，然後加入清潔劑，以海綿擦拭即可移除殘留污漬。

## 5. 關於回收

---

本電器產品採用可回收的材質。在本電器產品使用壽命結束時可棄置於回收家用電器的集中回收處，為環境保護盡一分力。請聯絡家用電器回收機構以了解詳情。

Congratulations on the purchase of your Primada Electric Multi Cooker! We hope it brings you many years of satisfaction. We trust the purchase of your new cooker will help you for fast/convenient cooking. Let you enjoy cooking and delicious foods.

Should you encounter situations that have not been properly addressed in this Instruction Manual, please contact our Customer Service Center where a technician can address your specific problem or question.

For more information, please visit the official website: [www.primada.com.hk](http://www.primada.com.hk)

The Company reserves the right to make technological and/or design changes to this product for continuous improvement.

Thank you for choosing!

# Contents

---

1. Important Safety Instructions .....	10
2. Package Contents and Technical Specifications .....	11
2.1 Package Contents .....	11
2.2 Technical Specifications .....	11
2.3 Product Diagram .....	12
3. Operating.....	13
3.1 Before Use.....	13
3.2 Operation .....	13
3.3 Indicator Light .....	13
3.4 Reminder.....	13
3.5 Cooking Reference .....	13
3.6 Functions Explanation .....	14
4. Cleaning and Maintenance .....	16
5. About Recycling.....	17

# 1. Important Safety Instructions

---

**READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.  
PLEASE KEEP THE INSTRUCTION MANUAL**

**When using our product, basic precautions should always be followed, including the following:**

1. The Appliance must be used in accordance with the directions in this Instruction Manual. Primada cannot be held liable or responsible for any damages or injuries caused by improper use.
2. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
3. Do not move the Appliance by pulling the power cord and make sure the power cord is not tangled.
4. Ensure the product is placed on a flat and stable surface when in operation.
5. Do not leave the Appliance unattended when it is plugged in.
6. Do not use the Appliance for anything other than its intended use.
7. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
  - farm houses;
8. This Appliance can only be used by children aged from 8 years and above. Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can only use the Appliance under supervision or have been briefed on safety instructions and understand the possible danger involved. Children shall not play with the Appliance. Cleaning and user maintenance shall not be performed by children unless they are older than 8 and supervised. Keep the Appliance and its power cord out of reach from children under 8 years old.
9. To avoid electric shock, DO NOT immerse the cable, plug or the product in water or any other liquid.
10. This Appliance is incompatible with external timers and remote controlling systems.
11. Only use the Power Adapter supplied by the manufacturer.
12. The plug must be removed from the receptacle before cleaning or maintaining the Appliance. Make sure the power connection point is dry before continue using the Appliance.
13. The product surface is subject to residual heat after use. Do not touch the Appliance to prevent scald.
14. Unplug the power plug when assembling, disassembling, cleaning and after using the Appliance.
15. Use handles to carry the Appliance steadily to avoid split of hot soup.
16. Do not allow children to play with the Appliance.
17. Hot surface during operation. Do not touch the Appliance to prevent scald.
18. After cooking, please switch off the Appliance, unplug from the power socket and wait for it to cool down before cleaning. For more details about cleaning and maintenance, please read '4. Cleaning and Maintenance' session on P.16 of the manual.

WARNING: Potential injury will be caused from misuse.

WARNING: Avoid spillage on the connector.


## 2. Package Contents and Technical Specifications

### 2.1 Package Contents

#### Standard Accessories



 PMC2800

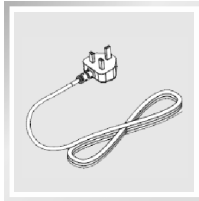

Power Cable



Recipe



IM



Warranty

### 2.2 Technical Specifications

Product	Electric Multi Cooker
Model	PMC2800R/PMC2800B
Voltage	220-240V~50/60Hz
Power	1000W-1200W
Volume	2L
Size	286x227x193mm

 
\* Package Contents and Technical and design specifications may be changed in the course of continuous product improvement.

## 2. Package Contents and Technical Specifications


---

### 2.3 Product Diagram

#### Main Unit

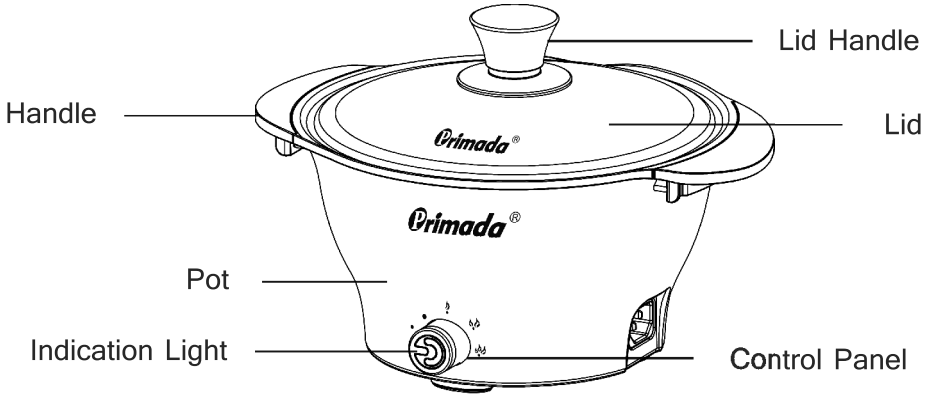

#### Control Panel

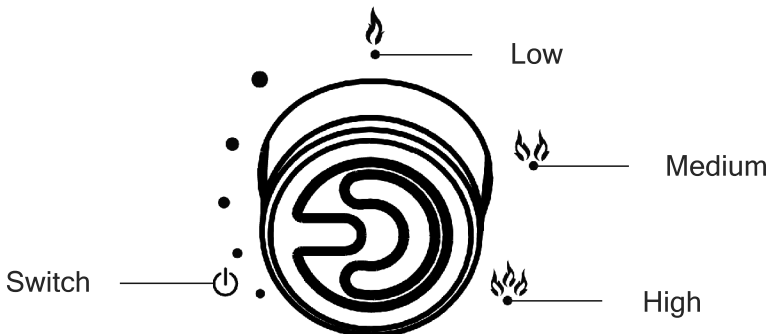 




### 3. Operating

---

#### 3.1 Before Use

- Please take out the Appliance and accessories from the carton box. Tear off the sticker, protective film or plastic film on the Appliance.

#### 3.2 Operation

- Before using the Appliance for the first time, wipe all removable parts with a cloth. Do not use abrasive cleaning solution.
- Place the Appliance on a flat, secure surface and ensure 10cm space around the Appliance. This Appliance is not suitable to use in cabinet or at outdoor.
- Plug the power plug into the socket. (Note: before connecting the Appliance, make sure that the voltage indicated on the Appliance is aligned with the local voltage. 220V-240V 50/60Hz)
- Caution: high temperature on the surface.
- Before connect to power, make sure the switch is pointing at "  ".

#### 3.3 Indicator Light

- It is normal for the indicator light goes on and off when cooking, it states the temperature controller is operating.

#### 3.4 Reminder

- It is recommended to close the lid during cooking to achieve better cooking effect.
- Wooden or silicone spatula is recommended.
- DO NOT immerse the Appliance in water or other liquids for cleaning.

#### 3.5 Cooking reference (for details, please refer to recipes)

Electric Multi Cooker can be used with the below settings.

Function	Setting
Keep Warm	Low
Boil	Medium
Steam/Slow cook	Medium
Saute/Grill	High
Roast	High
Hot pot	High

## 3. Operating

---

### 3.6 Functions Explanation

#### Keep Warm

- This setting will keep any previously cooked food warm. Please ensure that all food is fully cooked prior to using the keep warm function.
- After cooking, please ensure to switch off the Appliance and unplug from the power socket.

#### Boil

- This setting is ideal for boiling any food.
- Place the ingredients to be boiled inside the pot and fill with right amount of water, then close the lid.
- Switch to “Medium” position to allow the items to be boiled until fully cooked.
- After cooking, please ensure to switch off the Appliance and unplug from the power socket.

#### Slow Cook

- This setting is ideal for simmering any food.
- Place the ingredients to be simmered inside the pot and fill with right amount of water, then close the lid.
- Switch to “High” position first the water reaches boiling point.
- Once reached boiling point, switch to “Medium” position to allow the items to be simmered until fully cooked.
- After cooking, please ensure to switch off the Appliance and unplug from the power socket.

#### Steam

- This setting is ideal for steaming food.
- Pour in right amount of water.
- Place the food to be steamed on the steaming rack.
- Close the lid and steam for the required amount of time.
- DO NOT leave the Electric Multi Cooker unattended when steaming to avoid boil dry.
- After cooking, please ensure to switch off the Appliance and unplug from the power socket.

## 3. Operating

---

### Grill

- This setting is ideal for shallow frying food.
- Place the food to be cooked in the pot along with any required cooking oils or butters.
- After cooking, please ensure to switch off the Appliance and unplug from the power socket.

### Saute(stir-fry)

- This setting is ideal for stir-fry food.
- Place the food to be cooked in the pot along with any required cooking oils or butters.
- After cooking, please ensure to switch off the Appliance and unplug from the power socket.

### Roast

- This setting is ideal for roasting food.
- Place the food to be cooked in the pot along with any required cooking oils or butters.
- After cooking, please ensure to switch off the Appliance and unplug from the power socket.

### Hot Pot

- This setting is ideal for hot pot
- Fill with right amount of water in the pot, switch to “High” position until the water reaches boiling point.
- Once boiling point has been achieved and items fully cooked, insert ingredients and close the lid.
- Once the water reaches boiling point again, add seasonings based on personal taste.
- After cooking, please ensure to switch off the Appliance and unplug from the power socket.

## 4. Cleaning and Maintenance

---

- Clean the cooker and metal accessories before using.
- After cooking, please switch off the Appliance, unplug from the power socket and wait for it to cool down before cleaning.
- Wipe the outer case with a cloth, DO NOT immerse or rinse the Appliance with water or other liquids for cleaning.
- To maintain the non-stick effect of the Electric Multi Cooker, recommended cleaning the inner part of the appliance with sponge with mild detergent. DO NOT use any abrasive cleaning agents or stainless steel scrubber.
- It is normal for slight change on the color of the Appliance after using for some time, there will be no influence on the safety of using.
- To remove stubborn stains, pour in hot water and wait for a few minutes, then add in mild detergent and wipe with sponge.

## 5. About Recycling

---

This Appliance adopts recyclable materials. At the end of the service life of the Appliance. You may hand it to the recycling organization and participate in environmental protection. Please contact the home appliance recycling organizations for details.

# Pro Logic International Limited

[www.primada.com.hk](http://www.primada.com.hk)

 (852) 2365 0655 |  [info@iplushome.com](mailto:info@iplushome.com)